

Wikk Wireless Firefly™ Type: 300MCD22K
FCC ID : SU7CCF3002B

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept interference received, including interference that may cause undesired operation.

Notice

Any changes or modifications to Wikk Wireless equipment not expressly approved by Wikk Wireless could void the manufacturer's warranty and could void the user's authority to operate the equipment.

WARRANTY

The warranty period of Wikk Wireless Firefly™ transmitters is 24 months, beginning from the manufacturing date of the transmitter. During this period, if the product does not operate correctly, due to a defective component, the product will be repaired or replaced at the sole discretion of Wikk Wireless. The warranty does not extend to the transmitter case which can be damaged by conditions outside the control of Wikk Wireless, or to battery life.

Wikk
AccessAbility™
AUTOMATIC DOOR ACTIVATION SOLUTIONS
www.wikk.com
877-421-9490

Wikk Wireless Firefly™ Type: 300MCD22K
FCC ID : SU7CCF3002B

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept interference received, including interference that may cause undesired operation.

Notice

Any changes or modifications to Wikk Wireless equipment not expressly approved by Wikk Wireless could void the manufacturer's warranty and could void the user's authority to operate the equipment.

WARRANTY

The warranty period of Wikk Wireless Firefly™ transmitters is 24 months, beginning from the manufacturing date of the transmitter. During this period, if the product does not operate correctly, due to a defective component, the product will be repaired or replaced at the sole discretion of Wikk Wireless. The warranty does not extend to the transmitter case which can be damaged by conditions outside the control of Wikk Wireless, or to battery life.

Wikk
AccessAbility™
AUTOMATIC DOOR ACTIVATION SOLUTIONS
www.wikk.com
877-421-9490

Manual - 300 2 Button



Thank you for choosing a Wikk Wireless product.
Please read this manual carefully before using the product.
Made in China. Copyright © 2011 by Wikk Wireless.

CONTENTS

1 - TRANSMITTER OVERVIEW

- 1A - General information
- 1B - Technical specifications
- 1C - Main components

2 - CODING

3 - OPERATION

4 - BATTERY ACCESS

5 - TROUBLESHOOTING

1A - General information

The Wikk Wireless - Firefly™ Transmitter is a very small (1/2" x 1-7/8" x 1-1/2") key chain style wireless transmitter operating at 300 MHz. The Firefly™ achieves its small size by using state-of-the-art, surface mount components. It has been designed for use with and is compatible with all dip switch receivers operating at a 300 frequency, including all Multicode® dip switch digital receivers.

Multicode is a registered trademark owned by Linear Corporation.

Manual - 300 2 Button



Thank you for choosing a Wikk Wireless product.
Please read this manual carefully before using the product.
Made in China. Copyright © 2011 by Wikk Wireless.

CONTENTS

1 - TRANSMITTER OVERVIEW

- 1A - General information
- 1B - Technical specifications
- 1C - Main components

2 - CODING

3 - OPERATION

4 - BATTERY ACCESS

5 - TROUBLESHOOTING

1A - General information

The Wikk Wireless - Firefly™ Transmitter is a very small (1/2" x 1-7/8" x 1-1/2") key chain style wireless transmitter operating at 300 MHz. The Firefly™ achieves its small size by using state-of-the-art, surface mount components. It has been designed for use with and is compatible with all dip switch receivers operating at a 300 frequency, including all Multicode® dip switch digital receivers.

Multicode is a registered trademark owned by Linear Corporation.

2 - CODING

Set each of the ten-digit toggle code switches to match each code set in the receiver. Access to the Firefly™ toggle code switch is achieved by removal of the back cover and battery (if necessary). Move switches using a small pointed object, such as a paper clip, gently switching the small switches to either the ON or OFF position. (In Detail below, top switches 2, 4 and 7 are in the ON position.) When complete, reinstall battery and replace back cover, inserting bottom clip into front groove (see detail), then replace and tighten screw. Button #1 (large button) is set with the dip switches labeled 1, and button #2 (small button) is set with the dip switches labeled 2.

3 - OPERATION


Once the codes are set to match the receiver codes, you may test the system. Ensure the gate or door is visible and clear before testing.

Step 1. Push each Firefly™ button from a distance of about ten feet. If the receiver activates, the switches are properly matched.

Step 2. Test the transmitter from several locations to discover any "blind spots" caused by interference.

4 - BATTERY ACCESS

Remove set screw and open case from back. Attend to proper polarity when installing or replacing battery. See "coding" for proper removal and replacement of back cover.

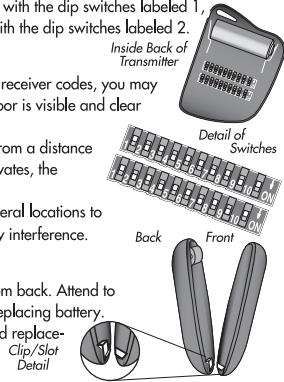

5 - TROUBLESHOOTING

PROBLEM	SOLUTION
The system does not receive the transmitter signal. The transmitter LED will not light.	Ensure clear plastic battery insulator has been removed; OR Replace the transmitter battery.
The system does not receive the transmitter signal. The transmitter LED is ON.	Check to ensure the transmitter switches are coded to match your system receiver.
The operating range is reduced.	Replace the transmitter battery.

2 - CODING

Set each of the ten-digit toggle code switches to match each code set in the receiver. Access to the Firefly™ toggle code switch is achieved by removal of the back cover and battery (if necessary). Move switches using a small pointed object, such as a paper clip, gently switching the small switches to either the ON or OFF position. (In Detail below, top switches 2, 4 and 7 are in the ON position.) When complete, reinstall battery and replace back cover, inserting bottom clip into front groove (see detail), then replace and tighten screw. Button #1 (large button) is set with the dip switches labeled 1, and button #2 (small button) is set with the dip switches labeled 2.

3 - OPERATION


Once the codes are set to match the receiver codes, you may test the system. Ensure the gate or door is visible and clear before testing.

Step 1. Push each Firefly™ button from a distance of about ten feet. If the receiver activates, the switches are properly matched.

Step 2. Test the transmitter from several locations to discover any "blind spots" caused by interference.

4 - BATTERY ACCESS

Remove set screw and open case from back. Attend to proper polarity when installing or replacing battery. See "coding" for proper removal and replacement of back cover.

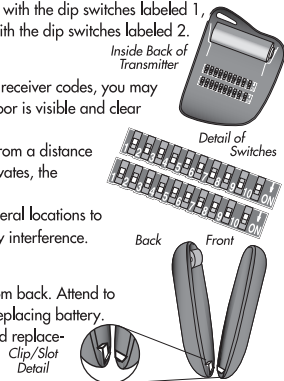

5 - TROUBLESHOOTING


PROBLEM	SOLUTION
The system does not receive the transmitter signal. The transmitter LED will not light.	Ensure clear plastic battery insulator has been removed; OR Replace the transmitter battery.
The system does not receive the transmitter signal. The transmitter LED is ON.	Check to ensure the transmitter switches are coded to match your system receiver.
The operating range is reduced.	Replace the transmitter battery.

The A23 battery has a shelf life of about 1 year. The product fully complies with Part 15 of the FCC Regulations.

1B - Technical Specifications

Operating frequency	300 MHz
Number of buttons	2
Battery:	1 ea. 12V A23
Number combinations:	1024
Operating temperature:	-20°F – 100°F
Overall dimensions:	1/2" x 1-7/8" x 1-1/2"
Weight:	1 oz.

1C - Main components

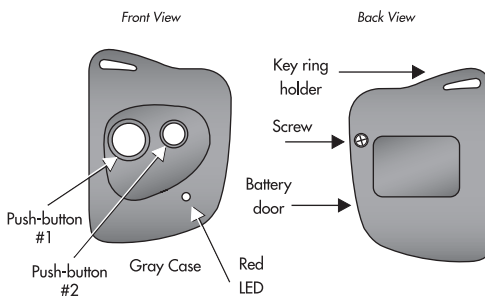

The A23 battery has a shelf life of about 1 year. The product fully complies with Part 15 of the FCC Regulations.

1B - Technical Specifications

Operating frequency	300 MHz
Number of buttons	2
Battery:	1 ea. 12V A23
Number combinations:	1024
Operating temperature:	-20°F – 100°F
Overall dimensions:	1/2" x 1-7/8" x 1-1/2"
Weight:	1 oz.

1C - Main components

