


N4X4S


5-1/2" X 5-1/2" X 2-1/8" (140mm x 140mm x 55mm)

1-7/8" Inside depth (48mm)

Used with 4-1/2" x 4-1/2" switches
(Wikk 4X4)

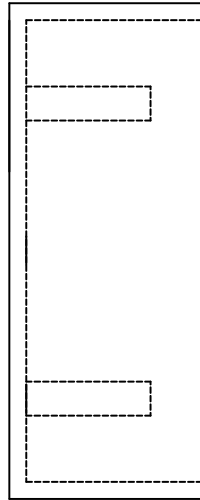


INSTALL BATTERY
CLIP HERE

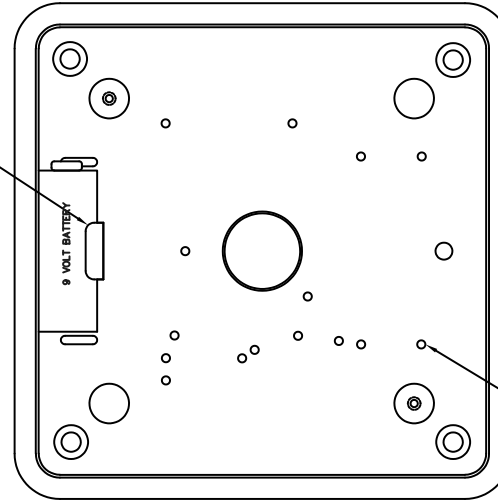

15 mounting pin
locations for Transmitter


- > Surface mount black ABS material for wireless or hard-wired applications
- > Repositionable mounting pins for transmitter placement
- > Weather resistant gasket is included and must be used with 4-1/2" X 4-1/2" switches

Switch mounting
locations

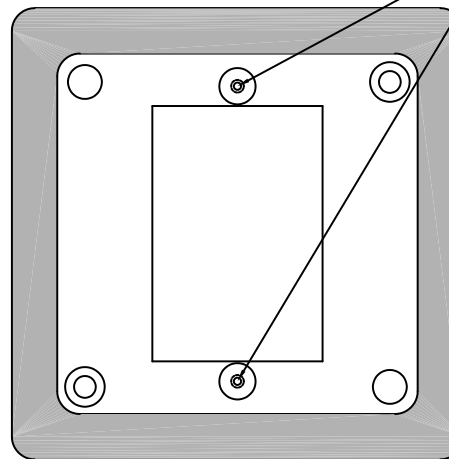

Weather resistant gasket
Back side view

For flush mount use N4X4F

		Wikk Industries, Inc. 6169 Industrial Court Greendale, WI 53129-0167 Phone: 414-421-9490 Fax: 414-421-3158	
SCALE	DRAWN BY/DATE	CHECKED BY/DATE	
N.T.S.	JK/07NOV11	LK/07NOV11	
TITLE			
N4X4S SURFACE MOUNT			
DRAWING NUMBER			
SWITCHES\BINDER DETAILS SWITCHES\N4RS-F N6RS-F INSTRUCTIONS			

Parts included with mounting boxes:

- > Black ABS surface or flush box
- > Transmitter mounting pins
- > 9V. battery mounting clip
- > Mounting instructions
- > Weather resistant gasket

N4X4S SURFACE MOUNT

Hollow Wall or Solid Wall (Illustration #1)

- 1.) Drill pilot holes in mounting box (placement indications are in box)
- 2.) Drill pilot holes in mounting surface
- 3.) Insert appropriate fastener (screw, toggle, etc.) through box and into mounting surface; tighten
- 4.) Insert Weather Resistant Gasket
- 5.) Complete assembly of switch

N4X4F FLUSH MOUNT

Hollow Wall Only (Illustration #2)

- 1.) Cut 5-5/8" X 5-5/8" access hole into mounting surface
- 2.) Insert box into the hole
- 3.) Utilize the two Phillips head screws to tighten silver hanger to the mounting surface
- 4.) Insert Weather Resistant Gasket
- 5.) Complete assembly of switch

CROSS SECTIONAL VIEWS

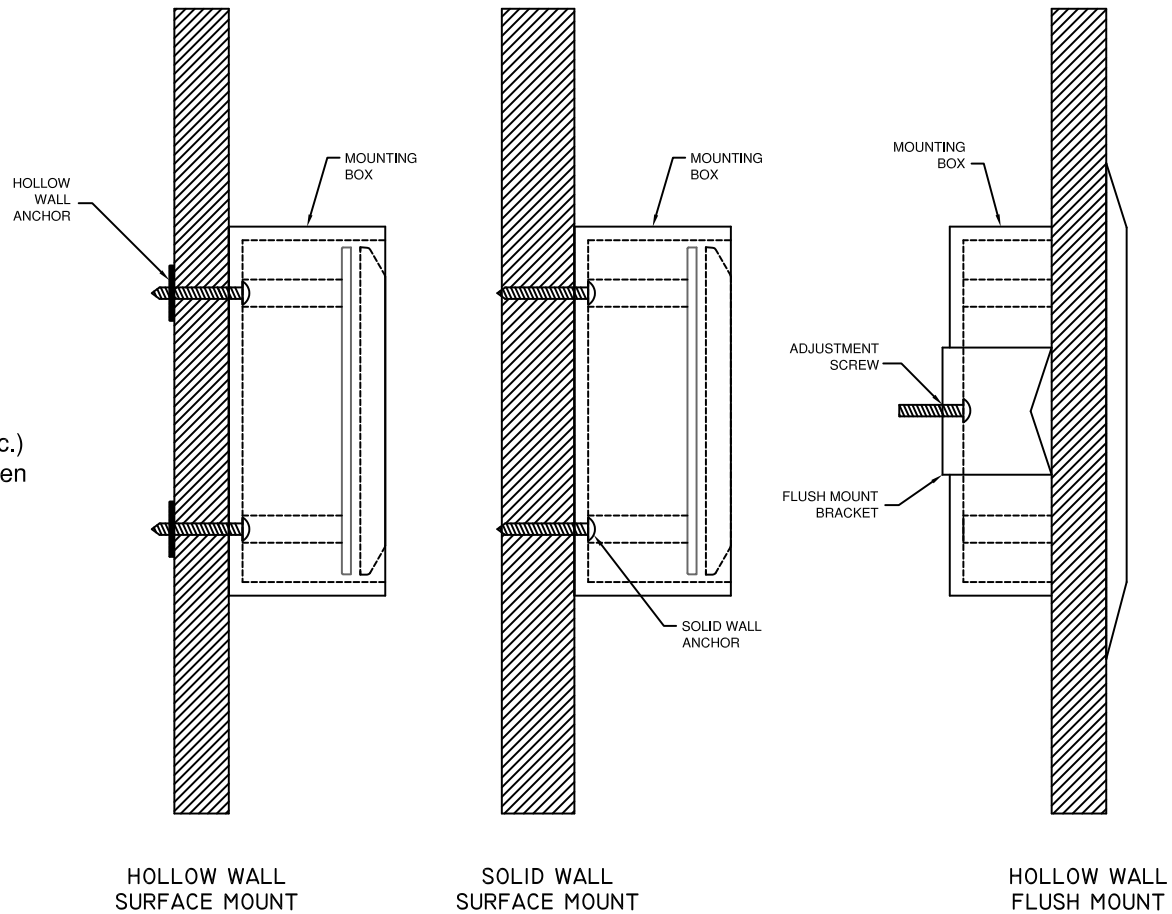


ILLUSTRATION #1

ILLUSTRATION #2