


BATTERY COMPARTMENT DOOR

BLACK ABS BOX FOR HARD-WIRED OR WIRELESS APPLICATION

SURF 6R IS ASSEMBLED WITH AN ALUMINUM ADAPTER PLATE
USED WITH 6" ROUND SWITCHES


		Wikk Industries, Inc. 6169 Industrial Ct. Greendale, WI 53129-0167 Phone: 414-421-9490 Fax: 414-421-3158	
SCALE	DRAWN BY/DATE	CHECKED BY/DATE	
FULL	JLO/13APR05	JK/12OCT11	
TITLE			
SQ. SURF. MOUNT FOR 6" RD SWITCH			
DRAWING NUMBER			
J:\SWITCHES\BINDER DETAIL SWITCHES\SURF 6R MOUNTING BOX			
WIKK PART NO.			
SURF 6R			

SURF SQ 4&6 BLK and SURF 6R MOUNTING INSTRUCTIONS


(HARD WIRED and WIRELESS)

SURF SQ 4 & 6 and SURF 6R

1. For the **SURF SQ 4 & 6** - Break out the battery compartment access cover from the back of the box and install it into the open area in the side wall located at the bottom of the box, as it will hang on the wall. When the access cover is in the closed position, the slot in the cover will face out and be closest to the switch. When installed correctly, the door slides smoothly and will be held in place by the mounting plate. (This step has already been completed for the **SURF 6R**)
If needed, drill a small weep hole in the bottom of the box (as it hangs) to allow moisture to evaporate.
2. Use appropriate screws (not supplied) to mount the box to the wall surface at the 4 open mounting hole positions.
3. If you are using a wireless transmitter, attach the transmitter to the back of the box using the included double sided tape. Connect the battery terminals to the battery and install into the battery compartment. Program the transmitter to match the receiver.
4. For either Hard-Wired or Wireless setups connect the lead wires to the switch at the 'NO' and 'COM' contacts.

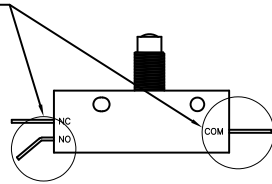

5. Fit the 6-32 x 5/8" socket cap screws from the switch parts bag into the 4 integral mounting pins located at the upper and lower 2-gang positions

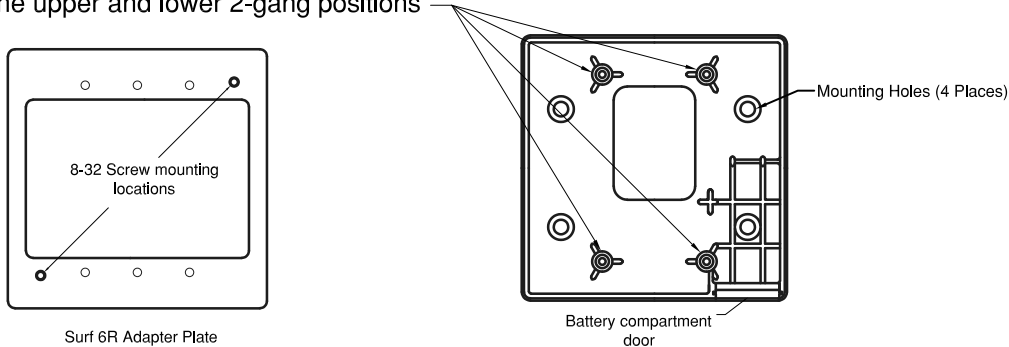

Note: For SURF 6R- Use the 8-32x1" screws provided in 6" round parts bag. See adapter plate.

6. Hang the wall switch onto the socket cap screws and tighten down with the Allen wrenches provided in the parts bag or with the Wikk handle grip Allen wrenches. Alternate the tightening of the screws a few turns at a time each from top to bottom.