



BATTERY COMPARTMENT DOOR

BLACK ABS MATERIAL FOR HARD-WIRED OR WIRELESS APPLICATION.
USED WITH 4 1/2" AND 6" SQUARE SWITCHES

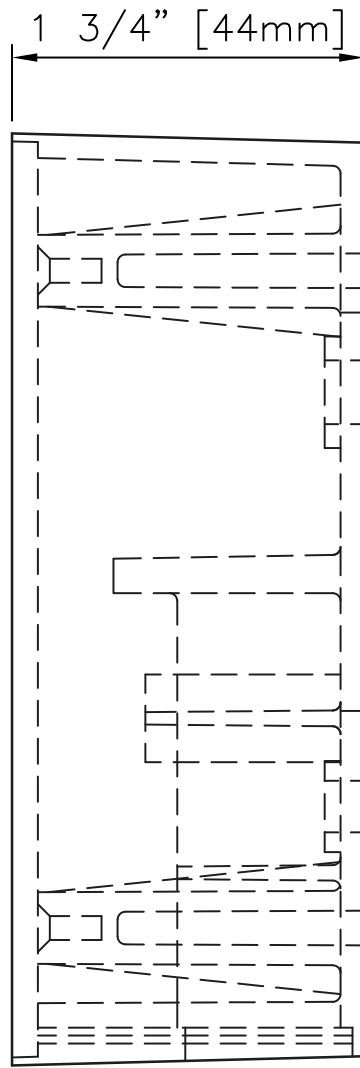


		Wikk Industries, Inc. 6169 Industrial Ct. Greendale, WI 53129-0167 Phone: 414-421-9490 Fax: 414-421-3158
SCALE FULL	DRAWN BY/DATE JLO/13APR05	CHECKED BY/DATE JK/12OCT11
TITLE SQUARE SURFACE MOUNT		
DRAWING NUMBER J:\SWITCHES\BINDER DETAIL SWITCHES\SURF SQ 4&6 BLK		
WIKK PART NO. SURF SQ 4 & 6 BLK		

SURF SQ 4&6 BLK and SURF 6R MOUNTING INSTRUCTIONS


(HARD WIRED and WIRELESS)

SURF SQ 4 & 6 and SURF 6R


1. For the **SURF SQ 4 & 6** - Break out the battery compartment access cover from the back of the box and install it into the open area in the side wall located at the bottom of the box, as it will hang on the wall. When the access cover is in the closed position, the slot in the cover will face out and be closest to the switch. When installed correctly, the door slides smoothly and will be held in place by the mounting plate. (This step has already been completed for the **SURF 6R**)
If needed, drill a small weep hole in the bottom of the box (as it hangs) to allow moisture to evaporate.
2. Use appropriate screws (not supplied) to mount the box to the wall surface at the 4 open mounting hole positions.
3. If you are using a wireless transmitter, attach the transmitter to the back of the box using the included double sided tape. Connect the battery terminals to the battery and install into the battery compartment. Program the transmitter to match the receiver.
4. For either Hard-Wired or Wireless setups connect the lead wires to the switch at the 'NO' and 'COM' contacts.

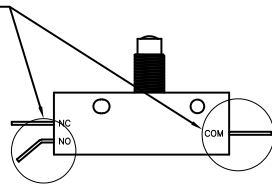

5. Fit the 6-32 x 5/8" socket cap screws from the switch parts bag into the 4 integral mounting pins located at the upper and lower 2-gang positions

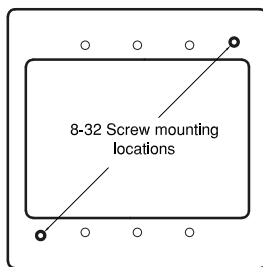

Surf 6R Adapter Plate

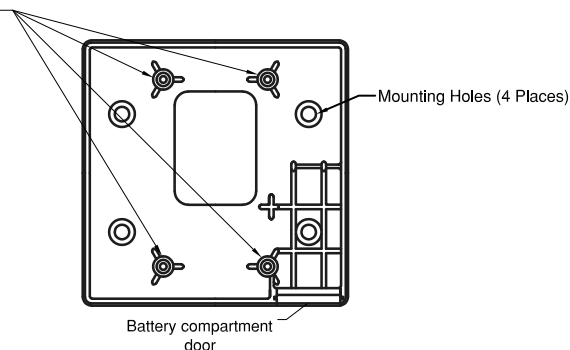

Note: For SURF 6R- Use the 8-32x1" screws provided in 6" round parts bag. See adapter plate.

6. Hang the wall switch onto the socket cap screws and tighten down with the Allen wrenches provided in the parts bag or with the Wikk handle grip Allen wrenches. Alternate the tightening of the screws a few turns at a time each from top to bottom.

