



**Wikk
Wireless**
www.wikk.com
877-421-9490

TRAPLUS91ALP3K



Please read this manual carefully before installing the product.

CONTENTS

1. TRANSMITTER OVERVIEW
 - 1A - General information
 - 1B - Technical specifications
 - 1C - Main component
2. NUMBERING
3. PROGRAMMING
4. OPERATION
5. BATTERY ACCESS
6. TROUBLESHOOTING

1A - General information

The Wikk Wireless - **TRAPLUS915ALP3K** transmitter is a key chain style mini transmitter operating at 915 MHz. It has been designed for the control of automatic closing systems and anti-burglar systems, thanks to its very high security coding system Rolling Code.


The code sent by the transmitter changes at each activation, avoiding any scanning and copying risk. A special algorithm allows to keep synchronized transmitter and receiver.

The CR2032 battery of the transmitter have a shelf life of about 24 months. The product fully complies with Part 15 of FCC Regulations.

1B - Technical specifications

Operating frequency:	915 MHz
Number of keys:	3
Battery:	3V lithium battery CR2032
Battery life:	18 - 24 months
Security Code:	Rolling Code
Number combinations:	2exp256
Operating temperature:	23°F - +131°F (-5°C - +55°C)
Overall dimensions:	2.46'' x 1.26'' x 0.39'' (62.4 x 32 x 10 mm)
Weight (with battery):	0.54 oz. (15.4 gr.)

1C - Main components

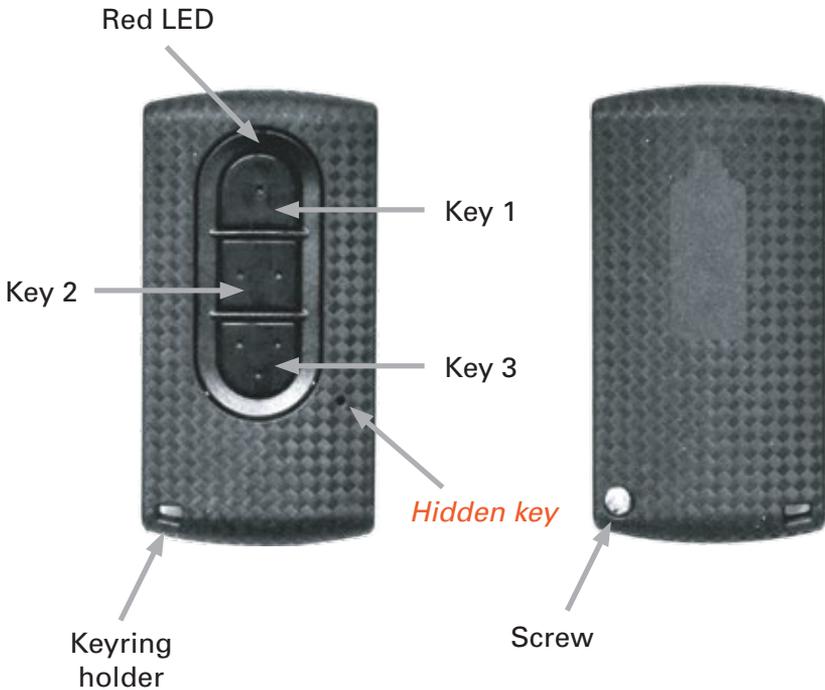

2 - NUMBERING

Each transmitter is manufactured and sold with a different factory-set serial number.

3 - PROGRAMMING

The transmitter must be programmed into your system memory. Your own installer or reseller will provide you the necessary instructions for your system. NOTE: Hidden key is used to remove individual transmitters from a group of installed transmitters. See receiver manual for details.

4 - OPERATION

A- Firmly depress the button until the red LED illuminates.

B- After the LED has illuminated, release the button.

If the device you are attempting to activate does not respond, repeat steps A and B or consult section 6 (Troubleshooting) of this manual.

5 - BATTERY ACCESS

To access the battery, remove the rear screw with a screwdriver and open the case. Slide out the old battery and replace them with the new ones [CR2032] respecting the polarity, with the positive (+) side upward.

NOTE: Please dispose of the batteries properly according to local laws and regulations. Test proper battery installation by verifying that the red LED illuminates when the button is pushed.

6 - TROUBLESHOOTING

PROBLEM	SOLUTION
The system does not receive the transmitter signal. The transmitter LED will not light	Replace the transmitter batteries
The system does not receive the transmitter signal. The transmitter LED is ON	Check to verify the transmitter is programmed into your sistem
The operating range is reduced	Replace the transmitter batteries

Wikk Wireless - Type: TRAPLUS915ALP3K
FCC ID: SU7PLUS915ALP3K

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE

Any changes or modifications to this equipment not expressly approved by the manufacturer could void the manufacturer's warranty and the user's authority to operate this product.

WARRANTY

The warranty period of the 915 transmitters is 60 months, beginning from the manufacturing date of the transmitter. During this period, if the product does not operate correctly, due to a defective component, the product will be repaired or replaced at the sole discretion of the manufacturer.

The warranty does not extend to the transmitter case which can be damaged by conditions outside the control of the manufacturer or to battery life.



www.wikk.com

877-421-9490