

1 CHANNEL NANO RECEIVER



Thank you for choosing a Wikk Wireless product.
Please read this manual carefully before installing the product.

1 - DESCRIPTION

The Nano Receiver is designed to control automatic closing systems and anti-burglar systems, thanks to its very high security coding system (KeeLoq® Hopping code).

The receiver has 1 output relay with NO contacts, and can be connected to many types of operators (gate, garage door, rolling shutters, awnings, anti-burglar appliances, etc.).



The programming can be done in a self-learning mode by means of one programming button.

This appliance fully complies with the European Regulations 89/336/EEC, 73/23/EEC, EN 60950-1 and FCC Part 15.

2 - TECHNICAL SPECIFICATIONS

Receiver type	Superheterodyne
Carrier frequency	433.92 MHz
Local oscillator frequency	6.6128 MHz
Demodulation	AM/ASK
Local Oscillator	VCO / PLL
Channel width	> 25 KHz
Intermediate frequency	10.7 MHz
Input sensitivity	-115 dBm
Local oscillator spurious emissions	< -57 dBm
Input load	50 Ohm
Power supply	12 / 24 VAC/DC
Max applicable power	24 VA
Relay number	1
contacts	C-NO
Memory capacity	85 user codes
TX security code	Rolling code
Max code combination number	264
Operating temperature	-20° / +70° C
Housing protection	IP2X
Overall dimensions	2 x 1 ¼ x ¾ inches


3 - LAYOUT AND CONNECTIONS

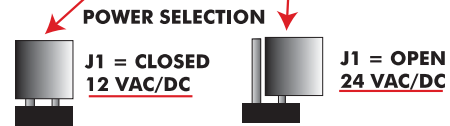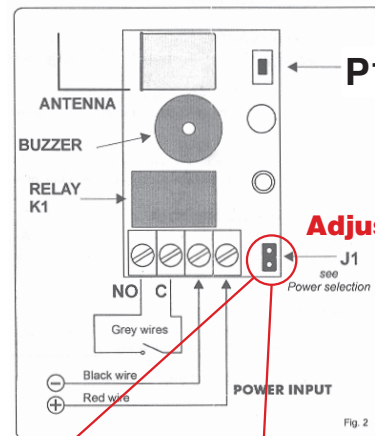

4 - TX PROGRAMMING

4.1 Using P1


- 1) Keep P1 pressed down until the buzzer emits a short beep (approx. 3 seconds); (Fig 3)
- 2) Push the transmitter key to program the receiver; the receiver will beep to verify program.
- 3) The receiver will allow additional transmitters to be programmed for 5 seconds. After 5 seconds, the receiver will beep and the programming procedure ends.

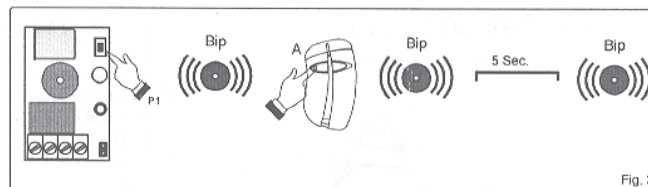

4.2 Without P1

With this procedure it is possible to program the transmitters without pressing P1 - program button (Fig 4)

- 1) Push simultaneously the keys A + B of the transmitter until the beep;
- 2) Release and push the key A until the next beep of the buzzer (memory opening);
- 3) Release A and push the key of the transmitter to memorize (A or B) until the beep of the buzzer (memory closing).

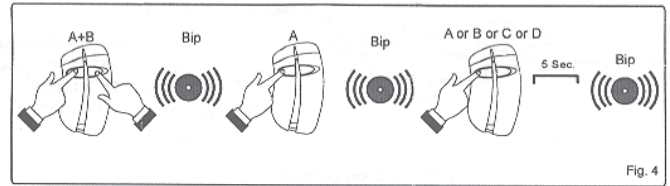

NOTE: The programming of a new transmitter without using the P1 button can only be done using a transmitter that has already been memorized. Use the memorized transmitter to open the memory (Step 1 and 2). Complete the procedure by pressing the key of the new transmitter to memorize.

5 - PROGRAMMING THE ADJUSTABLE TIME HOLD FEATURE

1. Press and hold P1 (program button) on the receiver until buzzer beeps (approx. 3 seconds).
2. Quickly release program button and immediately press and release the program button for the number of seconds of hold time.
3. Wait 5 seconds for receiver to exit program mode.

Example:

PR + PR + PR + PR + PR = 1 + 1 + 1 + 1 + 1 = 5 sec. adjustable hold time
(PR = Press - Release) (Maximum hold time is 20 seconds.)

6 - MEMORY FULL

If the memory is full, when you try to memorize a new transmitter the buzzer beeps 3 times.

7 - MEMORY ERASURE

7.1 Single transmitter

- 1) Push P1 until the beep of the buzzer, then release it;
- 2) Push the key of the transmitter to delete until the beep of the buzzer.


7.2 Full Memory erasure

- 1) Push P1 until the beep of the buzzer, then release it;
- 2) Release P1 and push it again until the buzzer beeps 3 times. At this point the memory has been completely erased.

8 - ENABLING/DISABLING THE ACTIVATION BEEP

It's possible to program the receiver to make a beep when the relay is activated. Follow this procedure:

- 1) Press simultaneously the keys A + B of a transmitter already memorized.
- 2) Release and press the key B of the transmitter to the beep.
For the beep disabling, repeat the above procedure.

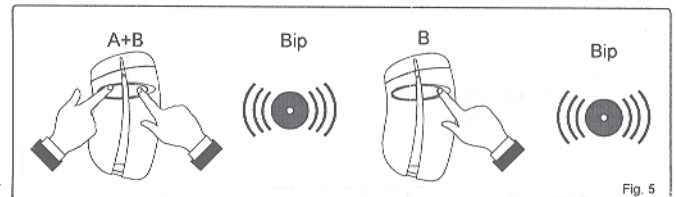

WARRANTY

The warranty period of the receiver is twenty-four (24) months. This warranty shall begin on the date the receiver is manufactured. During the warranty period, the product will be repaired or replaced (at the sole discretion of the manufacturer) if the product does not operate correctly due to a defective component. This warranty does not extend to (a) the receiver case, which can be damaged by conditions outside the control of the manufacturer.

Wikk
AccessAbility™
AUTOMATIC DOOR ACTIVATION SOLUTIONS
www.wikk.com
877-421-9490